


MODEL 3010 HYDRAULIC DUMP

ASSEMBLY INSTRUCTIONS

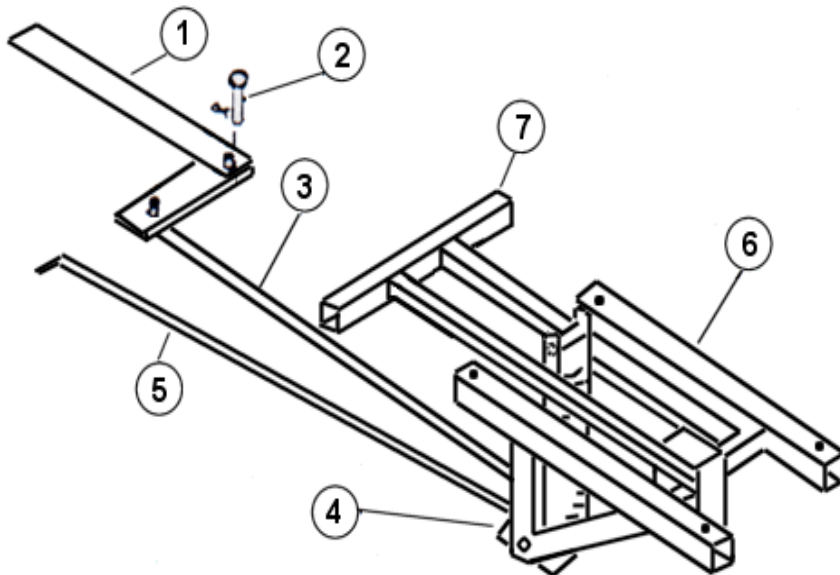

<u>ITEM NO.</u>	<u>DESCRIPTION</u>
1	PUMP HANDLE
2	1/2" CLEVIS
3	CONNECTING ROD
4	HYDRAULIC JACK
5	VALVE HANDLE
6	JACK FRAME
7	LIFT SLIDER

1. Assemble the dump assembly (items 4, 6 & 7) and set the assembly onto the chassis so that the four mounting holes on the jack frame (Item 6) align with the four holes provided on the chassis.
2. Insert four 5/16" bolts, nuts and lock washers and tighten.
3. a. Wagon Only – Install the pump handle (Item 1) by removing the wagon steering pivot pin and reinserting through the corner hole in the pump handle.
b. Tandem Trailer Only – Install the pump handle (Item 1) on the tandem trailer chassis by inserting the 1/2" clevis pin through the corner hole in the pump handle and the welded bushing on the front left of the tandem chassis.
4. Install one end of the pump handle connecting rod (Item 3) into the hydraulic jack lever hole and the other end into the hole located at the end of the pump handle. Secure with cotter keys. Insert valve handle and secure to pressure valve on the jack.
5. Insert the jack valve handle (Item 5) through the hole located at the right side of the chassis front cross member. Connect the loop at other end of valve handle through hole in valve located at lower part of jack.



Country Manufacturing, Inc.

P.O. Box 104

Fredericktown, OH 43019

PH: 740-694-9926

FAX: 740-694-5088