

ADJUSTA-FLEX TINE HARROW ASSEMBLY INSTRUCTIONS


Step 1: Take the three chain ends with bolts located at front end of the rear portion of harrow and bolt through corresponding chain on the rear end of the front portion of harrow.

Note: Disregard Step 1 above if you have purchased the wheel carrier. If so, take the extension chains from the wheel carrier box and bolt them between the front and rear halves of the harrow, to allow room for the wheels between front & rear sections.

Step 2: Loop middle chain at front of harrow through the small circle on the draw ring and bolt back to chain.

Step 3: Loop side chains through large circle of draw ring, connecting back to the same chain using the quick link on the chain's end.

Note: Changes in aggression modes are achieved by lengthening or shorting the chains (Step 3). The closer the quick link is located to the draw ring, the more aggressive the mode – harrow will invert to a “v” shape. The farther away from the draw ring the quick link is located, the less aggressive the mode – as illustrated here at maximum width.

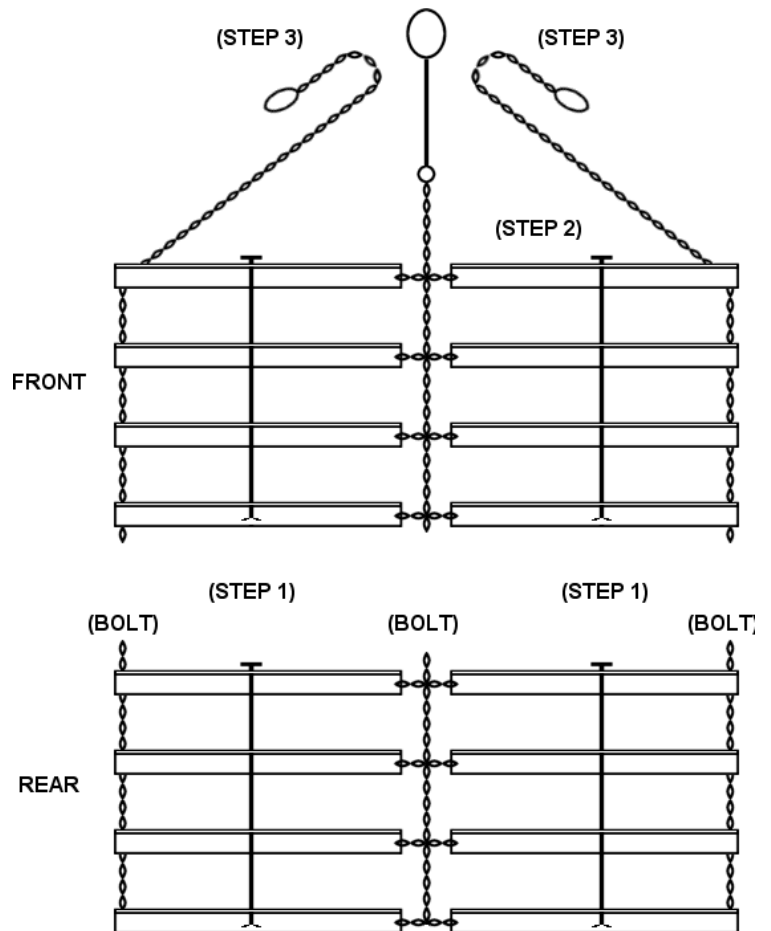

Country Manufacturing, Inc.
P.O. Box 104
Fredericktown, OH 43019
PH: 740-694-9926
FAX: 740-694-5088