




ZERO TURN DROP SPREADER

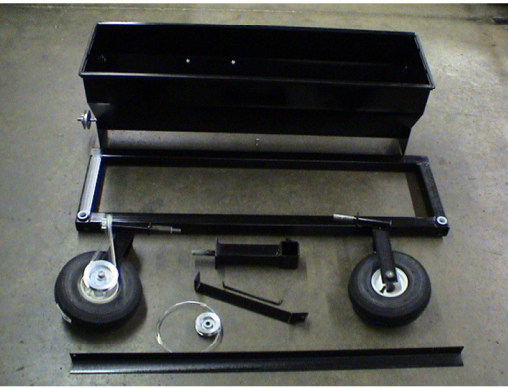


Parts needed: 1ea. main frame, 1ea belt drive castor, 1ea. swivel caster, 1ea. material bin, 1ea. o-belt, 1ea. pulley, 1ea. frame mount, 1ea. baffle, 1ea. slider rod, 1ea. slider handle, 8ea. 5/16 x 3" bolts, 8ea. 5/16 flat washers, 8ea. 5/16 lockwashers, 8ea. 5/16 locknuts, 1ea. 3/4 locknut, 2ea. 1" SAE washer, 1ea. 1/8 cotter pin, 2ea. 3/32 cotter pins, 1ea. 1/4 x 3/4" bolt, 1ea. 1/4 locknut, 1ea. 3" pulley.

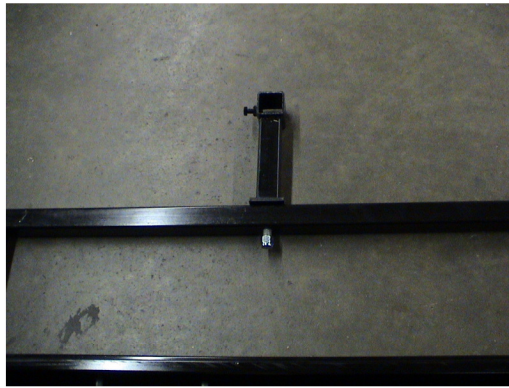


Assemble frame mount to main frame using 3/4 locknut. DO NOT OVERTIGHTEN as this frame mount must be able to turn.

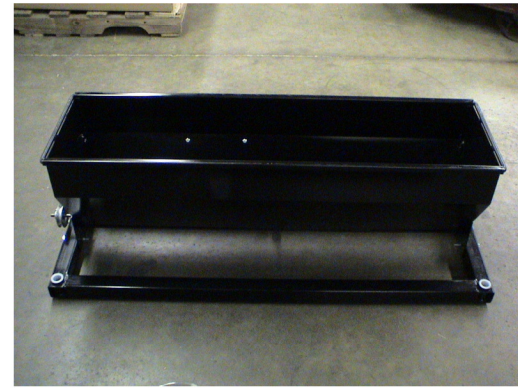


Assemble material bin to the main frame using 8ea 5/16 nuts, bolts and washers. NOTE: Material bin pulley must be facing the left in relation to the caster spindle holes shown in the photo.

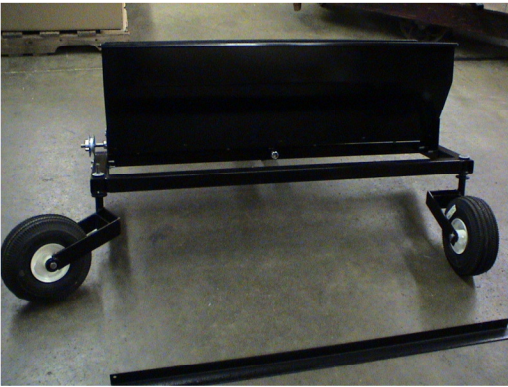


Slide casters into main frame. Secure the right side caster with a 1" washer and 1- 1/8" cotter pin.

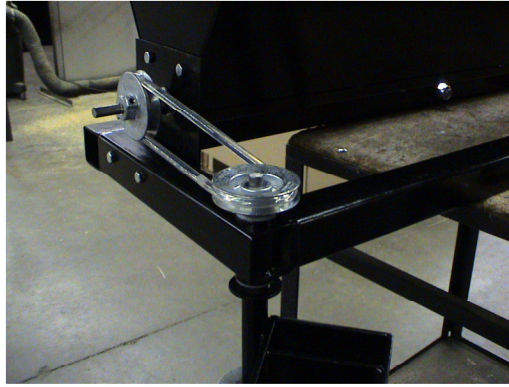

Slide pulley into position shown and secure the set screw. Slide the o-belt into place. (Rotating the tire will make this easier)

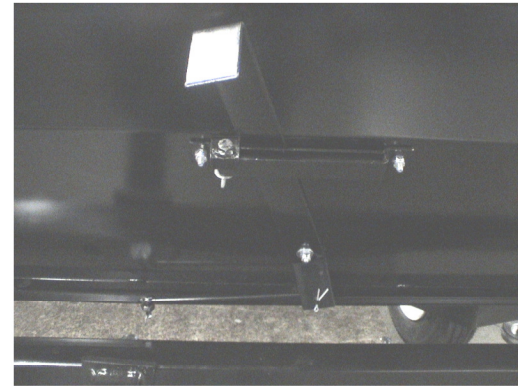

Attach feed rate lever to the material bin using 1 1/4x3/4 bolt and 1/4 self locking nut. Attach operating rod with 2- 2/32 cotter pins.

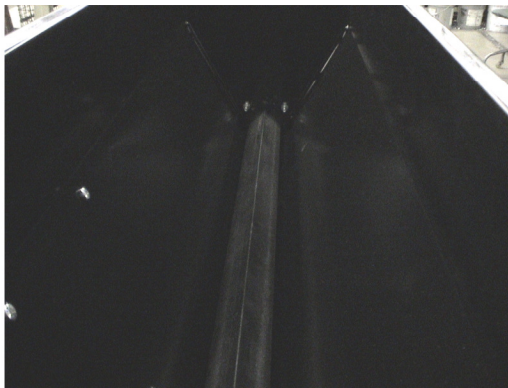

Install auger baffle shield using the double sided adhesive tape.

CMI Country Manufacturing, Inc.

P.O. Box 104 333 Salem Avenue
 Fredericktown, Ohio 43019
 Phone: (740) 694-9926
 Fax: (740) 694-5088
 Web Site: www.countrymanufacturing.com